

SIZZLE Neutral Oven & Grill Cleaner/Degreaser Limpiador/desengrasante neutro para hornos y parrillas



Scrape particles from grill.
Raspe las partículas de la parrilla.



Turn off grill.
Apague la parrilla.

3 Apply SIZZLE to half of the grill. Let sit for 30 seconds.
Aplique SIZZLE a la mitad de la parrilla. Déjalo reposar durante 30 segundos.



Scour the grill with a non-scratch pad.
Frega la parrilla con un almohadilla antiarañazos.



Squeegee the surface clean.
Limpia la superficie con una espátula.

6 Repeat Steps 3, 4, & 5 on the rest of the grill.
Repita los pasos 3, 4 y 5 en el resto de la parrilla.



Season grill with cooking oil.
Sazone la parrilla con aceite de cocina.

USE DIRECTIONS:

Never spray on skin or towards eyes. Designed for **OVENS, GREASY GRILLS, STOVE TOPS** and **HOODS**. Spray **SIZZLE** on surfaces full strength. **SIZZLE** works best when applied to warm surfaces (100-150 degrees F). Allow 1 to 5 minutes for detergent to penetrate soil deposits. Wipe off dissolved and loosened soil deposits with a damp cloth. No rinsing is necessary under normal conditions. Do not spray on painted surfaces. Avoid contamination of food.

PKI105534 2/1 Gallon Handled